

EU customers please see the information about import VAT on our [shipping page](#).

Delivery to the USA is currently suspended. More options [here](#).

Recent Posts

 [New Size Adaptor for EE Smart Hub DC Power Input Connector Available](#)

 [New Repair Guide for Braun Oral-B Vitality 3708 & 3710 Published](#)

 [New Battery for Solderless Sonicare Series Toothbrushes Now Available](#)

 [New Repair Guide for Oral-B Pro Type 3772 Toothbrush Published](#)

 [New Video About Oral-B iO Series Battery Replacement](#)

Modify and Replace with Longer Battery

Continuing on from the first page of [battery replacement instructions for the Braun Oral-B Professional Care Type 3754 and 3756](#), we will remove the battery compartment and trim out the plastic stoppers so that a full length 49mm battery can be fitted. Please support us in writing these guides by buying your 49mm replacement battery from us [here](#).



Lifting the plastic tabs (arrowed below) over the metal tabs slide the battery holder off the metal chassis of the handle.

Recent Comments

- 🗨 [Ionic Admin](#) on [New Video About Oral-B iO Series Battery Replacement](#)
- 🗨 M Thomas on [New Video About Oral-B iO Series Battery Replacement](#)
- 🗨 Jeff on [Braun Oral-B iO Toothbrush Battery Replacement Guide](#)
- 🗨 [Ionic Admin](#) on [New Video About Oral-B iO Series Battery Replacement](#)
- 🗨 M Thomas on [New Video About Oral-B iO Series Battery Replacement](#)

Search Entire Site

🔍 Search ...



The four splines down the inside of the holder, plus the central stub (all arrowed below) need to be trimmed off with a knife.



Once you have shaved all the plastic down check that you can slide your replacement battery right up to the end.

Bend **both** the solder tags on the 49mm battery to the **same pattern as the negative tag** on the original by bending them over the tip of the screwdriver to get tight bends.



Trim them to the same height as the originals using the scissors. Very carefully start to narrow down the width of the negative terminal solder tag by first snipping into the tag from the side. Don't try to cut into it half way in one go, just try to cut a quarter of the way in from the side and it will tear to half way. Careful not to cut right through! Then cut down from the top end to remove the piece. You will see (below) the top left piece of the solder tag removed below, which is easier then trying to trim it from both sides and it will still line up with the circuit board.




Trim the positive solder tag to match the original in the same way.



Test fit the battery in the holder then reassemble the holder into the handle.



Refit the new battery with the positive terminal nearest the motor, then slide the circuit board in to make sure the tags line up.

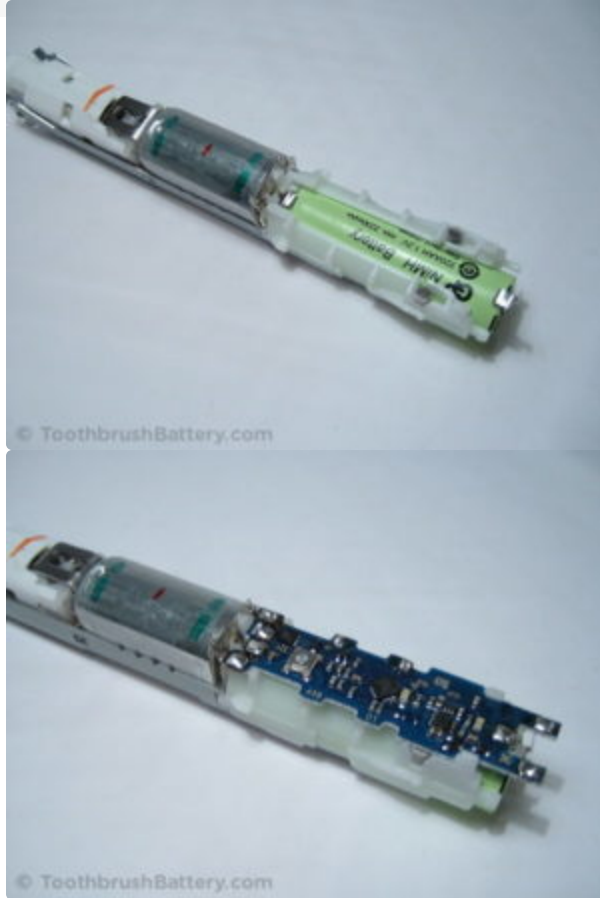

Once you're happy with the alignment click below to move on to:

Reassembly

Part of
Ionic Industries



Cart
Customer Support
FAQ
Shipping & Returns
Recycling
Privacy
Terms of Use
My Account

About Us
Contact Us

Ionic Industries
Chichester
West Sussex
United Kingdom



[contact@toothbrush
battery.com](mailto:contact@toothbrushbattery.com)

© ToothbrushBattery.com 2026. All Rights Reserved.

Extracted URLs from **<https://toothbrushbattery.com/guides/braun-oral-b-professional-care-1000-battery-replacement/modify-replace-longer-battery/>**

1. <https://toothbrushbattery.com/info/privacy/>
2. <https://toothbrushbattery.com/guides/braun-oral-b-professional-care-1000-battery-replacement/modify-replace-longer-battery/>
3. <https://toothbrushbattery.com/>
4. <https://toothbrushbattery.com/shop/>
5. <https://toothbrushbattery.com/product-category/toothbrush-batteries/>
6. <https://toothbrushbattery.com/product-category/shaver-batteries/>
7. <https://toothbrushbattery.com/product-category/appliance-batteries/>
8. <https://toothbrushbattery.com/product-category/cables-adaptors/>
9. <https://toothbrushbattery.com/product-category/spare-parts/>
10. <https://toothbrushbattery.com/guides/>
11. <https://toothbrushbattery.com/guides/philips-sonicare-diamondclean-hx9340-battery-replacement/>
12. <https://toothbrushbattery.com/guides/philips-sonicare-easyclean-hx6530-battery-replacement/>
13. <https://toothbrushbattery.com/guides/philips-sonicare-2-series-battery-replacement-hx6220-hx6240-hx6250/>
14. <https://toothbrushbattery.com/guides/colgate-omron-battery-replacement-c200/>
15. <https://toothbrushbattery.com/guides/oral-b-io-toothbrush-battery-replacement-io3-io4-io5-io6-io7-io8-io9-io10/>
16. <https://toothbrushbattery.com/guides/braun-oral-b-triumph-professional-care-battery-replacement/>
17. <https://toothbrushbattery.com/guides/braun-oral-b-triumph-professional-care-v2-battery-replacement-3761-3762-3764/>
18. <https://toothbrushbattery.com/guides/braun-oral-b-vitality-type-3708-3710-battery-replacement-guide/>
19. <https://toothbrushbattery.com/guides/braun-oral-b-vitality-battery-replacement/>
20. <https://toothbrushbattery.com/guides/braun-oral-b-sonic-complete-battery-replacement/>
21. <https://toothbrushbattery.com/guides/braun-oral-b-professional-care-type-3728-battery-replacement/>
22. <https://toothbrushbattery.com/guides/braun-oral-b-professional-care-1000-battery-replacement/>
23. <https://toothbrushbattery.com/guides/braun-oral-b-genius-type-3765-battery-replacement/>
24. <https://toothbrushbattery.com/guides/braun-oral-b-type-3766-3767-battery-replacement-pro-smart/>
25. <https://toothbrushbattery.com/guides/braun-oral-b-type-3772-pro-3-3000-battery-replacement/>
26. <https://toothbrushbattery.com/guides/braun-oral-b-professional-care-type-4729-battery-replacement/>

27. <https://toothbrushbattery.com/blog/repair-braun-oral-b-toothbrush/>
28. <https://toothbrushbattery.com/blog/>
29. <https://toothbrushbattery.com/blog/toothbrush-battery-replacement-service/>
30. <https://toothbrushbattery.com/braun-oral-b-toothbrush-chargers/>
31. <https://toothbrushbattery.com/sonicare-toothbrush-spare-parts/>
32. <https://toothbrushbattery.com/why-your-electric-toothbrush-is-not-charging/>
33. <https://toothbrushbattery.com/blog/care-tips-electric-toothbrush/>
34. <https://toothbrushbattery.com/blog/how-to-repair-braun-oral-b-wireless-smartguide/>
35. <https://toothbrushbattery.com/braun-oral-b-smart-guide-display-3741-3742/>
36. <https://toothbrushbattery.com/blog/are-your-charging-coil-wires-broken/>
37. <https://toothbrushbattery.com/blog/battery-for-philips-sonicare-airfloss/>
38. <https://toothbrushbattery.com/blog/upgrading-ni-cd-batteries-to-ni-mh/>
39. <https://toothbrushbattery.com/guides/which-new-electric-toothbrush-buy/>
40. <https://toothbrushbattery.com/currency/>
41. <https://toothbrushbattery.com/cart/>
42. <https://toothbrushbattery.com/info/shipping/>
43. <https://toothbrushbattery.com/buy/braun-vitality-49mm-x-14mm-replacement-toothbrush-battery/>
44. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-mod-compare.jpg>
45. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-holder1.jpg>
46. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-holder2.jpg>
47. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-holder3.jpg>
48. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-mod-plastic-tabs.jpg>
49. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-cut-plastic-tabs.jpg>
50. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/mod-bend-pos-b.jpg>
51. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-mod-neg1.jpg>
52. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-mod-pos1.jpg>
53. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-mod-in-holder.jpg>
54. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-mod-in-handle.jpg>
55. <https://toothbrushbattery.com/wp/wp-content/uploads/2014/02/braun-oral-b-3756-replacement-battery-mod-in-handle-pcb.jpg>
56. <https://toothbrushbattery.com/guides/braun-oral-b-professional-care-1000-battery-replacement/reassembly/>
57. <https://toothbrushbattery.com/blog/new-size-adaptor-for-ee-smart-hub-dc-power-input-connector-available/>
58. <https://toothbrushbattery.com/blog/repair-guide-for-braun-oral-b-vitality-type-3708-3710-published/>
59. <https://toothbrushbattery.com/blog/solderless-sonicare-toothbrush-battery-available/>

60. <https://toothbrushbattery.com/blog/repair-guide-for-oral-b-pro-3-type-3772-toothbrush/>
61. <https://toothbrushbattery.com/blog/new-video-about-oral-b-io-series-battery-replacement/>
62. <https://ionicindustries.com/>
63. <https://facebook.com/ionicindustries>
64. <https://www.youtube.com/user/ionicindustries>
65. <https://toothbrushbattery.com/info/customer-support/>
66. <https://toothbrushbattery.com/faq/>
67. <https://toothbrushbattery.com/info/recycling/>
68. <https://toothbrushbattery.com/info/terms-of-use/>
69. <https://toothbrushbattery.com/my-account/>
70. <https://toothbrushbattery.com/info/about-us/>
71. <https://toothbrushbattery.com/info/contact-us/>
72. <https://toothbrushbattery.com/blog/secure-access-now-available-every-page/>